

DOOR USE INSTRUCTIONS

Electrical Interlock | Pneumatic Interlock Electrical Wave Trash Chute Doors

ATTENTION: When the red button is illuminated, the chute will not operate on your floor. The reasons typically are:

- The trash chute is being used on another floor.
(“Push to Open” button will be illuminated solid red.)
- The trash bins are overfilled or being emptied in the trash room.
- The chute is being serviced (to include cleaning and deodorizing).

Do **NOT** force the handle to open if there is a handle on your trash chute door.

If service is needed, promptly report details to the property management company.



To discard TRASH, there are two options to open the door:

Option 1A (RECOMMENDED)

Electric Interlock Door – i.e., trash chute door has a handle) WAVE your hand in front of the sensor button located at the top left, wait to hear the “unlock” click, then turn the door handle and pull open. Discard bagged trash and then release the door.. The door will self-close and audibly lock.

Option 1B (RECOMMENDED)

Pneumatic Electric and Wave Door – i.e., trash chute door has no handle) WAVE your hand in front of the sensor button located at the top left, wait to hear the “unlock” click, and the door will open automatically. Discard bagged trash. The door will self-close and audibly lock.

Option 2 (PNEUMATIC INTERLOCK SYSTEMS)

PUSH and hold the second button from the top left, then wait, and the door will automatically open. Discard bagged trash. The door will self-close and audibly lock.

CHUTES
PATENTED
CHUTES INTERNATIONAL™

33 Industrial Park Drive
Waldorf, MD 20602